MODEL: 50233BRZ

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS FOUNTAIN SHOULD TAKE APPROXIMATELY 10 MINUTES TO ASSEMBLE.

MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

UNPACK THE FOUNTAIN

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS: COLUMN WITH RUBBER HOSE, UPPER TRAY, LOWER TRAY, PUMP, RESERVOIR AND A BAG OF RIVER STONES.

FOUNTAIN ASSEMBLY

1. PLACE PUMP INTO RESERVOIR, RUN POWER CORD UP AND OVER BACK OF RESERVOIR,

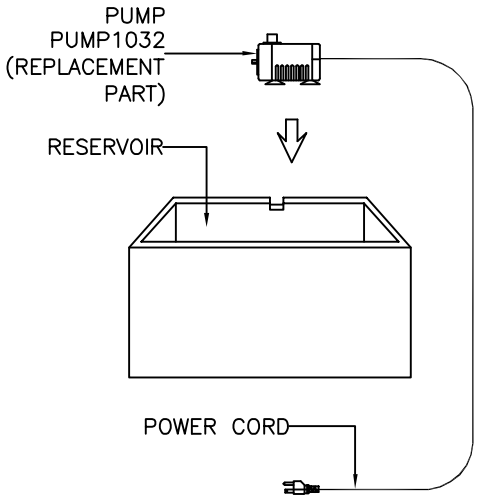

2. PLACE LOWER TRAY ONTO TOP OF THE RESERVOIR.

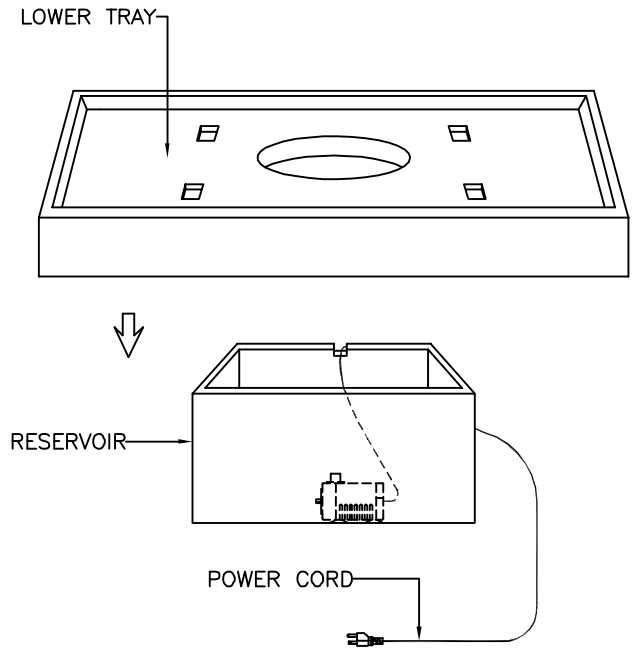

3. FEED RUBBER HOSE THROUGH HOLE IN UPPER TRAY, THEN PLACE COLUMN INTO THE UPPER TRAY.

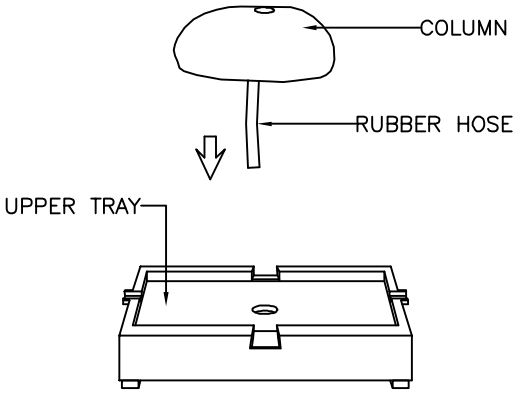

4. TAKE OUT THE PUMP FROM HOLE IN LOWER TRAY, ATTACH PUMP TO THE RUBBER HOSE, THEN PLACE PUMP BACK INTO RESERVOIR AND PLACE UPPER TRAY WITH COLUMN INTO LOWER TRAY.

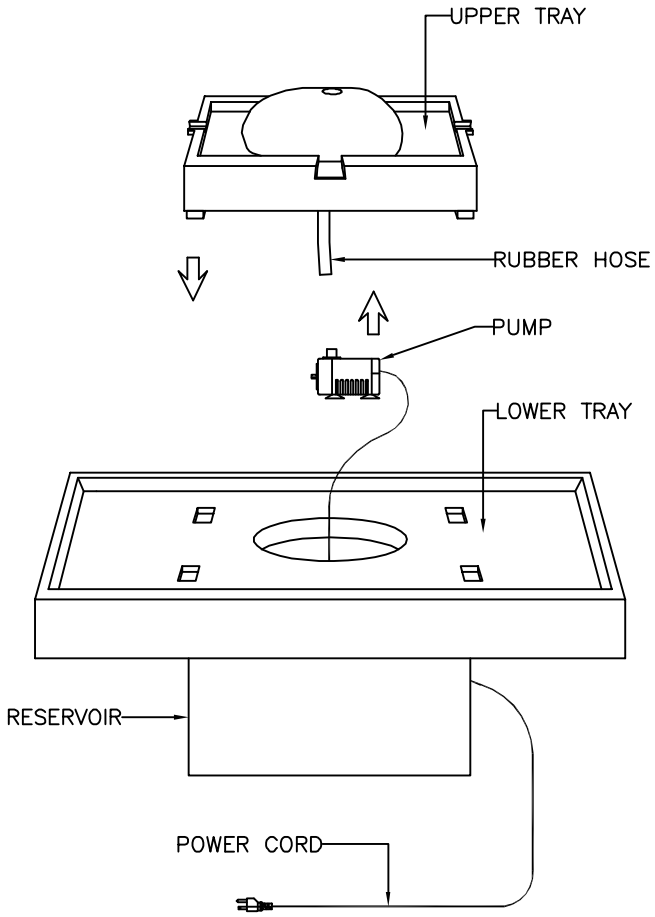

MODEL: 50233BRZ

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

FOUNTAIN ASSEMBLY

5. PLACE DECORATIVE RIVER STONES INTO LOWER TRAY.

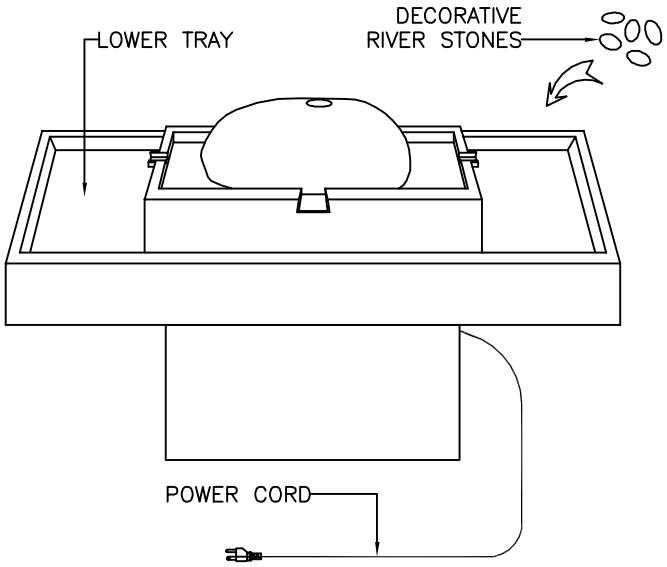

6. FILL RESERVOIR WITH 0.5 GALLONS OF WATER FROM TOP OF THE LOWER TRAY TO COMPLETELY SUBMERSE THE PUMP.

NOTE: DISTILLED WATER IS RECOMMENDED TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD-UP.

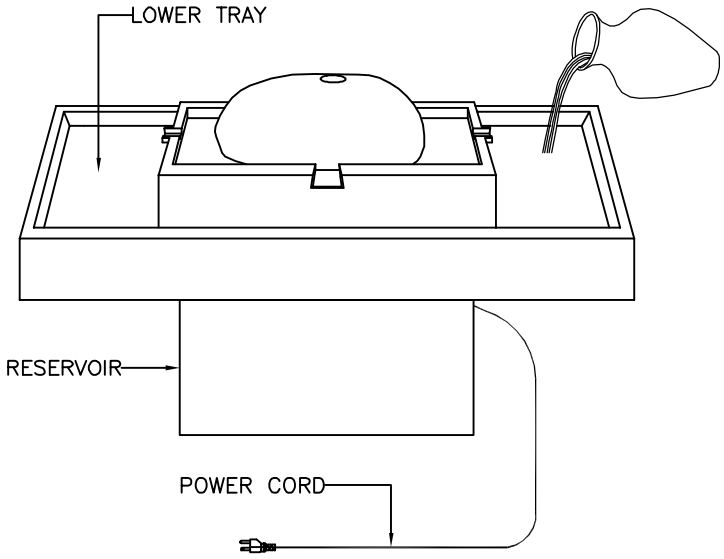

7. PLUG POWER CORD INTO AN OUTLET, YOUR NEW FOUNTAIN IS READY FOR USE.

TROUBLE SHOOTING:

1. IF YOUR FOUNTAIN DOES NOT WORK, CHECK PLUG AT THE SOCKET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.

2. NEXT CHECK TO MAKE SURE THE OUTLET IS POWERED.

3. IF THE FOUNTAIN STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

SPLASHING DISCLAIMER:

SPLASHING MAY OCCUR WHEN FOUNTAIN IS INITIALLY TURNED ON. PROTECT SURROUNDING SURFACES AS NEEDED.

IMPORTANT PUMP INFORMATION:

PUMP MUST BE FULLY SUBMERSED IN WATER WHILE OPERATING.

WATER:

TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD UP THE USE OF DISTILLED WATER IS RECOMMENDED.

WARNING:

* THIS FOUNTAIN IS RATED FOR INDOOR USE.

** ONCE A WEEK INSPECT FOUNTAIN, FLOOR AND ADJACENT WALL FOR MOISTURE BUILD-UP AND CLEAN AS NECESSARY. THIS IS ESPECIALLY IMPORTANT FOR HUMID ENVIRONMENTS.

*** THIS UNIT MUST BE CONNECTED TO A SUPPLY CIRCUIT THAT IS PROTECTED BY A GROUND FAULT CIRCUIT INTERRUPTER (GFCI). THE GFCI SHOULD BE TESTED ON A ROUTINE BASIS. TO TEST THE GFCI, PUSH THE TEST BUTTON. THE GFCI SHOULD INTERRUPT POWER. PUSH THE RESET BUTTON. POWER SHOULD BE RESTORED. IF THE GFCI FAILS TO OPERATE IN THIS MANNER, THE GFCI IS DEFECTIVE.

AVAILABLE PART IS:
PUMP1032 (PUMP)